



**Pentair®
Water**

Pentair® Water			DRW. DR100016	SPARE-PARTS													
			Select language	English	SPARE-PARTS KIT TABLE												
SPARE-PARTS			VLRX 16													PUMP MODEL	
RECOMMENDED PARTS KIT	KIT REF. Nr.	KIT DESCRIPTION	COMPONENT REF. Nr.	COMPONENT DESCRIPTION	VLRX 16-20 F T	VLRX 16-30 F T	VLRX 16-40 F T	VLRX 16-50 F T	VLRX 16-60 F T	VLRX 16-70 F T	VLRX 16-80 F T	VLRX 16-100 F T	VLRX 16-120 F T	VLRX 16-140F T	VLRX 16-160F T		
	82	TIE ROD KIT (PUMP BODY ~)	339 214 97	ROD WASHER NUT (TIE ROD LOCKING ~)	ZBR34340 4 pc 4 pc 4 pc	ZBR33580 4 pc 4 pc 4 pc	ZBR34350 4 pc 4 pc 4 pc	ZBR34360 4 pc 4 pc 4 pc	ZBR34370 4 pc 4 pc 4 pc	ZBR33620 4 pc 4 pc 4 pc	ZBR34380 4 pc 4 pc 4 pc	ZBR34390 4 pc 4 pc 4 pc	ZBR34400 4 pc 4 pc 4 pc	ZBR34410 4 pc 4 pc 4 pc	ZBR34420 4 pc 4 pc 4 pc		
	200	BOLTS AND SCREWS KIT	66 274 237 105 273 4	SCREW GUARD COUPLING SCREW SCREW (COUPLING ~) SCREW RING (STOP ~) SCREW									ZBR32880				
	201	GASKET KIT	78 6 25	NOZZLE (AIR ~) GASKET (FILL/DRAIN PLUG ~) O-RING (PUMP BODY ~)									ZBR33680				
*	371	MECHANICAL SEAL KIT	482 266 267	ADJUSTMENT SPACER SEAL (STATIONARY ~) SEAL (ROTATING ~)									ZBR22310				
	323	STAGE (INTERMEDIATE ~)KIT	21 478 277 276	IMPELLER SPACER SUPPORT (GUIDE RING ~) RING (GUIDE ~)									ZBR34740				
	374	HYDRAULIC KIT WITH BEARING	9 21 479 276 277 487 290	DIFFUSER IMPELLER SPACER RING (GUIDE ~) SUPPORT (GUIDE RING ~) BEARING AMBER (DIFFUSER-BEARING-RING INTER									ZBR34750				
	384	PUMP BODY KIT	288	BASE (PUMP ~)									ZBR34760				
	402	MOTOR KIT	488	COMPLETE MOTOR	ZBR30730 1 pc	ZBR21250 1 pc	ZBR26630 1 pc	ZBR31110 1 pc	ZBR3530 1 pc	ZBR34030 1 pc	ZBR34040 1 pc						
	404	KIT ALBERO	232 166 71 73	SHAFT WASHER (SEAL COMPRESSION ~) WASHER NUT	ZBR34620 1 pc 1 pc 1 pc 1 pc	ZBR34630 1 pc 1 pc 1 pc 1 pc	ZBR34640 1 pc 1 pc 1 pc 1 pc	ZBR34650 1 pc 1 pc 1 pc 1 pc	ZBR34660 1 pc 1 pc 1 pc 1 pc	ZBR34670 1 pc 1 pc 1 pc 1 pc	ZBR34680 1 pc 1 pc 1 pc 1 pc	ZBR34690 1 pc 1 pc 1 pc 1 pc	ZBR34700 1 pc 1 pc 1 pc 1 pc	ZBR34710 1 pc 1 pc 1 pc 1 pc	ZBR34720 1 pc 1 pc 1 pc 1 pc		
	405	COUPLING KIT	275 237 103	PIN (MOTOR COUPLING ~) SCREW (COUPLING ~) COUPLING (MOTOR PUMP ~)	ZBR33290 4 pc 1 pc	ZBR33300 4 pc 1 pc			ZBR33310 4 pc 1 pc							ZBR34160	
	406	LANTERN KIT	27	LANTERN	ZBR33830 1 pc	ZBR33840 1 pc			ZBR33850 1 pc							ZBR34440	
	411	GUARD COUPLING KIT	274 414	GUARD COUPLING SCREW GUARD COUPLING		ZBR30360 2 pc			ZBR33360							ZBR33360	
	452	HYDRAULIC KIT, FIRST STAGE	284 21 435 276 277	INTERCONNECTOR (COMPLETE SUCTION ~) IMPELLER SPACER RING (GUIDE ~) SUPPORT (GUIDE RING ~)									ZBR34730				
	455	BASE KIT	163	BASE									ZBR34870				
	474	SLEEVE KIT	25 83	O-RING (PUMP BODY ~) SLEEVE	ZBR34770 2 pc 1 pc	ZBR33490 2 pc 1 pc	ZBR34780 2 pc 1 pc	ZBR34790 2 pc 1 pc	ZBR34800 2 pc 1 pc	ZBR34530 2 pc 1 pc	ZBR34810 2 pc 1 pc	ZBR34820 2 pc 1 pc	ZBR34830 2 pc 1 pc	ZBR34840 2 pc 1 pc	ZBR34850 2 pc 1 pc		
*	475	WEAR RINGS KIT	276 277	RING (GUIDE ~) SUPPORT (GUIDE RING ~)									ZBR34860				
	483	CHAMBER (UPPER ~ WITH DIFFUSER)KIT	486 308	CONICAL SPRING CHAMBER (UPPER ~ WITH DIFFUSER)									ZBR34600				
	484	RECYCLING PLUG KIT	6 86	GASKET (FILL/DRAIN PLUG ~) PLUG (RECYCLING ~)									ZBR33880				
	494	COWLING KIT	493	COWLING									ZBR33870				